


TRUKKIRENT

by Uudenmaan Konepalvelu

Aquamatic-
vesitysjärjestelmä

Aquamatic
topping-up system

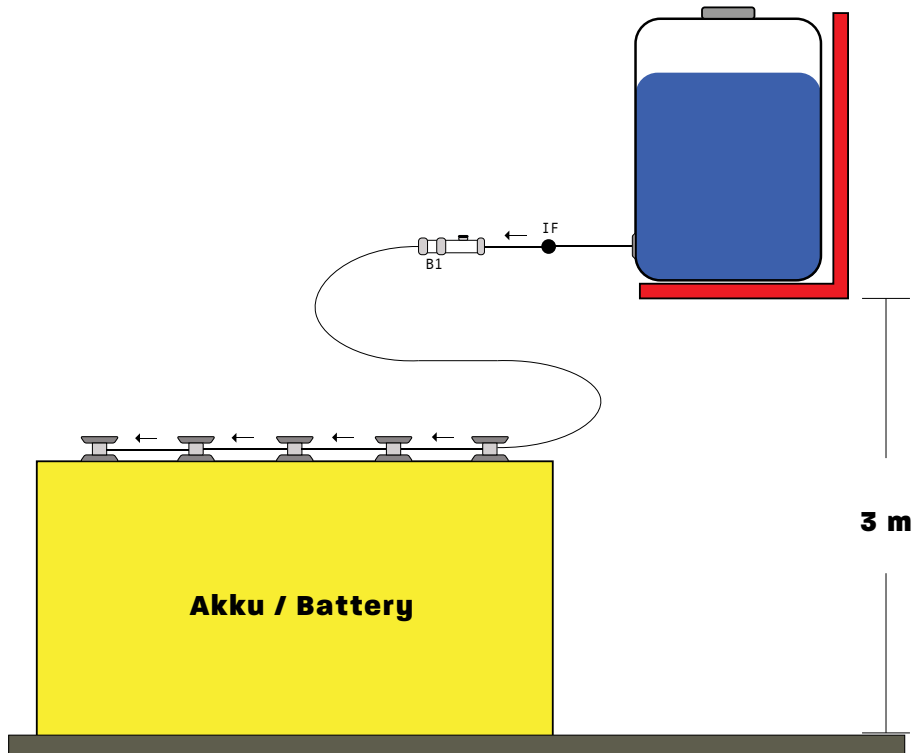

Tärkeää!
**Akku tulee varata
ennen vesitystä**

1. Varaa akku valmistajan ohjeiden mukaan ennen vesityksen aloittamista.
2. Aseta vesityskannu 3 metrin korkeudelle lattiasta
3. Kiinnitä pikaliitin (B1) akussa olevaan pikaliittimeen
4. Virtausmittari (IF) pyörii kun akkuvesi virtaa kennoihin
5. Kun virtausmittari pysähtyy, vesitys on valmis
6. Tarkasta, että akun kennojen tulppien valkoiset indikaattorit ovat ponnahtaneet yläasentoon
7. Irrota pikaliitin

Important!
**The battery must be
charged before
topping up**

1. Charge the battery according to the manufacturer's instructions.
2. Place the Aquamatic container 3 metres above floor level
3. Attach the connector (B1) to the connector on the battery
4. The flow indicator (IF) starts rotating once the flow of water begins
5. When the flow indicator stops the topping-up is complete
6. Check if each white indicator on the battery cells have popped up to max level
7. Detach the connector

Uudenmaan Konepalvelu Oy

Levysepänkatu 9, 04440 Järvenpää

+358 44 505 5898

info@uudenmaankonepalvelu.fi

www.uudenmaankonepalvelu.fi